


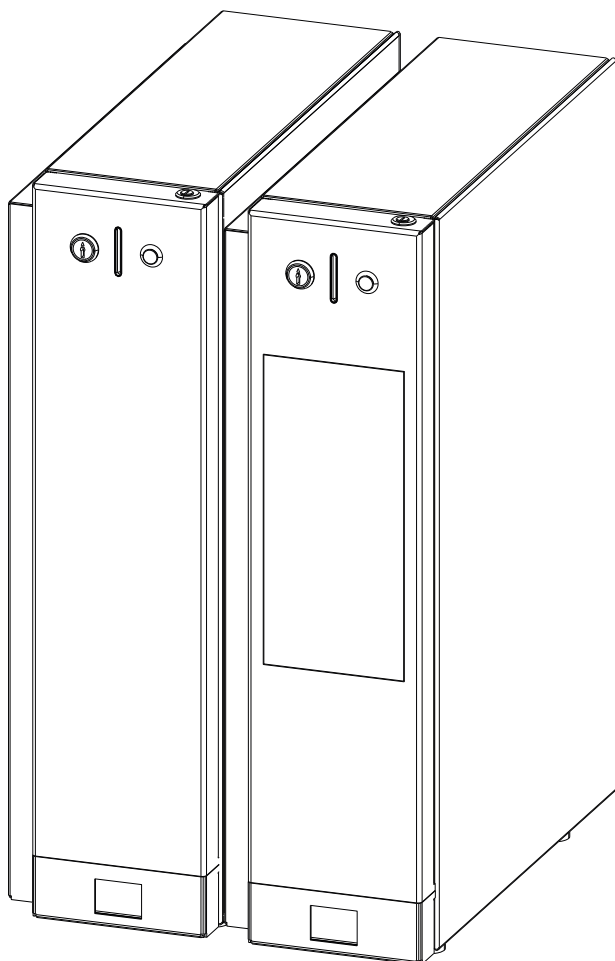

VS Module for payment systems Siamonie 01

ST01, MK01 and SK01

415.67.020.40

Index 00

Date: 23.10.2020

Sielaff GmbH & Co. KG

Automatenbau

Postfach 20

D-91565 Herrieden

Muenchener Strasse 20

D-91567 Herrieden

Telephone: +49 9825 18-0

Telefax: +49 9825 18-31 11 55

en

Original operating instructions

E-Mail: export@sielaff.de

Internet: <http://www.sielaff.com>

Operating instructions



Copyright

© SIELAFF GmbH & Co. KG Automatenbau

This documentation is protected by copyright. No parts of this manual may be used or reproduced or amended in any manner whatsoever without written permission from the Copyright Holder. The company reserves all rights, especially of translation, re-print, using charts and pictures, broadcasting, photo-mechanic or other reproduction and the storage in data-processing systems, also for excerpts.

SIELAFF does not accept responsibility in respect of the contents of this operating manual and cannot be held liable for any claims made based on information not contained therein.

In addition, Sielaff reserves the right to update this publication and make changes to it, without entering the obligation to inform any person of these changes.

Modifications

The texts, pictures and data in these Operating instructions are in accordance with the technological state of the machine at the date of printing. Errors due to further development excepted.

Variants

Please note that these operating instructions apply for different vending machine variants. For this reason some of the details described might not apply for your vending machine.

Contents

- 1 Safety4**
- 2 Technical data6**
- 3 Variants6**
 - 3.1 ST016
 - 3.2 MK016
 - 3.3 SK016
- 4 Mounting7**
 - 4.1 Mounting7
 - 4.2 Adjust motorized coin return9
- 5 EC-Declaration of conformity10**

1 Safety

The operating manual should be kept in an easily accessible place.

- Before commissioning of the machine the operating manual should be read and understood.
- When the vending machine is being transported, installed, serviced or repaired, it is recommended to observe the following regulations and guidelines in their latest version:
 - EU guidelines
 - VDE regulations (Association of German Electrotechnical Engineers)
 - Country-specific regulations
 - Accident prevention regulations
 - Industrial code
 - Trade association guidelines
 - Regulations of the responsible utility company
- Machine installation and repairs may only be performed by trained service engineers.
- This machine is not designed to be used by persons (including children) with limited physical, sensory or mental abilities or lack of experience and/or knowledge, unless they are looked after by another person responsible for their safety or they have received instructions how to use the machine.
- Children should be looked after to guarantee that they do not play with the machine.
- If the connection cable is damaged, it may only be replaced by a service engineer of the manufacturer or an equally qualified person.
- Appliance plugs should never be inserted in sockets when damp or touched with wet hands.
- A residual current circuit-breaker with maximum 30 mA absolute fault current must be connected in series with the module, the fuse protection must not be higher than 16 amp.
- Disconnect the machine before cleaning.
- The module is only suited to be put up indoors in dry and heated rooms.
- Do not clean the module with a water hose or a high-pressure cleaner.
- Use only original spare parts



NOTE

Any modification or conversion of the module is prohibited!
SIELAFF disclaims liability for any defects in these cases!

Hotline

Inquiries and orders are processed through the following address:

**SIELAFF GmbH & Co. KG Automatenbau
Muenchener Strasse 20
D - 91567 Herrieden**

Telephone:	+49 9825 18-0	Switchboard
	+49 9825 18-31 51 08	Service hotline
Telefax:	+49 9825 18-31 54 99	Service
	+49 9825 18-31 52 99	Spare part orders
E-Mail:	export@sielaff.de	
www:	www.sielaff.de	

2 Technical data

Dimensions W x H x D	175 x 600 x 425 mm
Supplied fuse protection	16 A Characteristic B
Residual current circuit breaker	$I_N = 30 \text{ mA}$
Maximum sound pressure	< 70 dB (A)
Weight	11 kg

3 Variants

3.1 ST01

Module ST01 can only be used for one coin mechanism. In this module a key-operated switch and a return button are always installed.

Only one module ST01 can be connected to each vending machine. Any further module must be type SK01.

When connecting more than one module to one vending machine, module ST01 is always the master.

3.2 MK01

Different panels can be installed in the door of module MK01. Thus it is possible to use this module for coin mechanisms and for different banknote and card readers.

Two different credit systems at the most may be installed in one module MK01. The third credit system requires a further module.

If more than one module is connected, only one module can be the master, which is the one featuring the key-operated switch and return button. Any further module must be connected as slave.

3.3 SK01


Module SK01 is always a slave without return button and key-operated switch. It can only be used for cashless MDB-credit systems. The credit system is directly connected to the MDB-interface of the machine control.


Different panels can be installed in the door of module SK01. Thus it is possible to use this module for different credit systems.

4 Mounting

4.1 Mounting

1. Open the door of the module.
2. Loosen the securing screw (Detail A)
3. Take off the right side wall of the module.
4. Open the machine door.
5. Loosen the securing screw of the right side wall (Detail B)
6. Remove the right side wall of the vending machine.
7. Exchange both side walls and re-attach them.
8. Hook in the module at the right side wall of the vending machine.
9. Plug in the six-channel plug in the module.

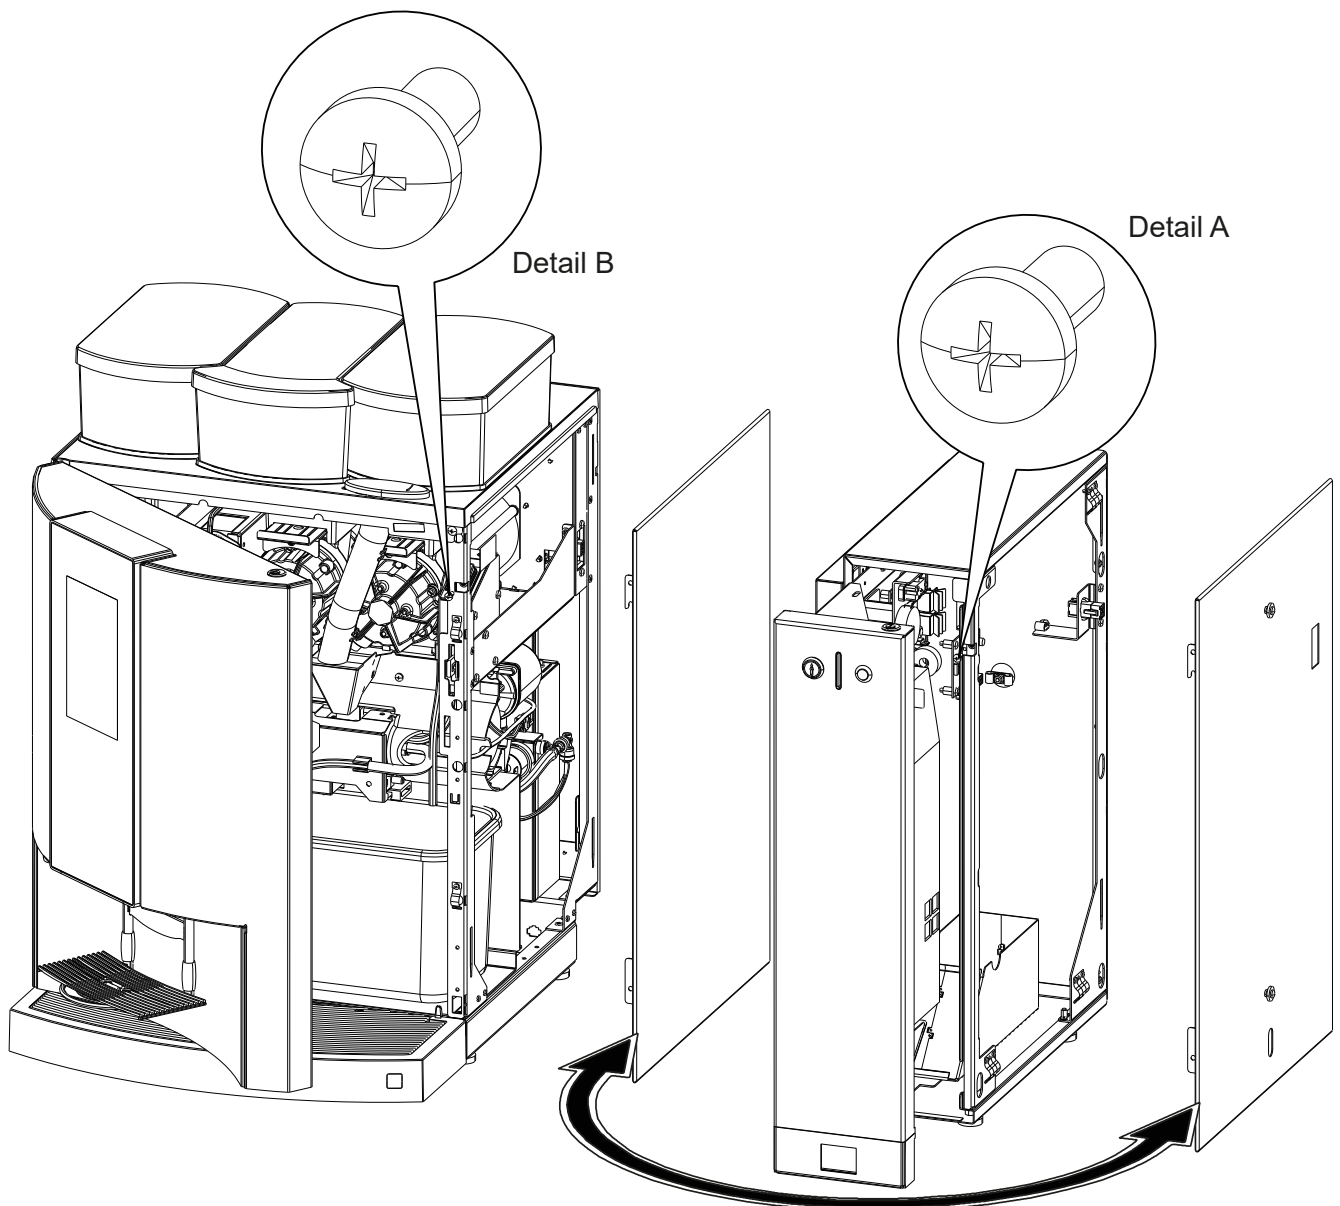

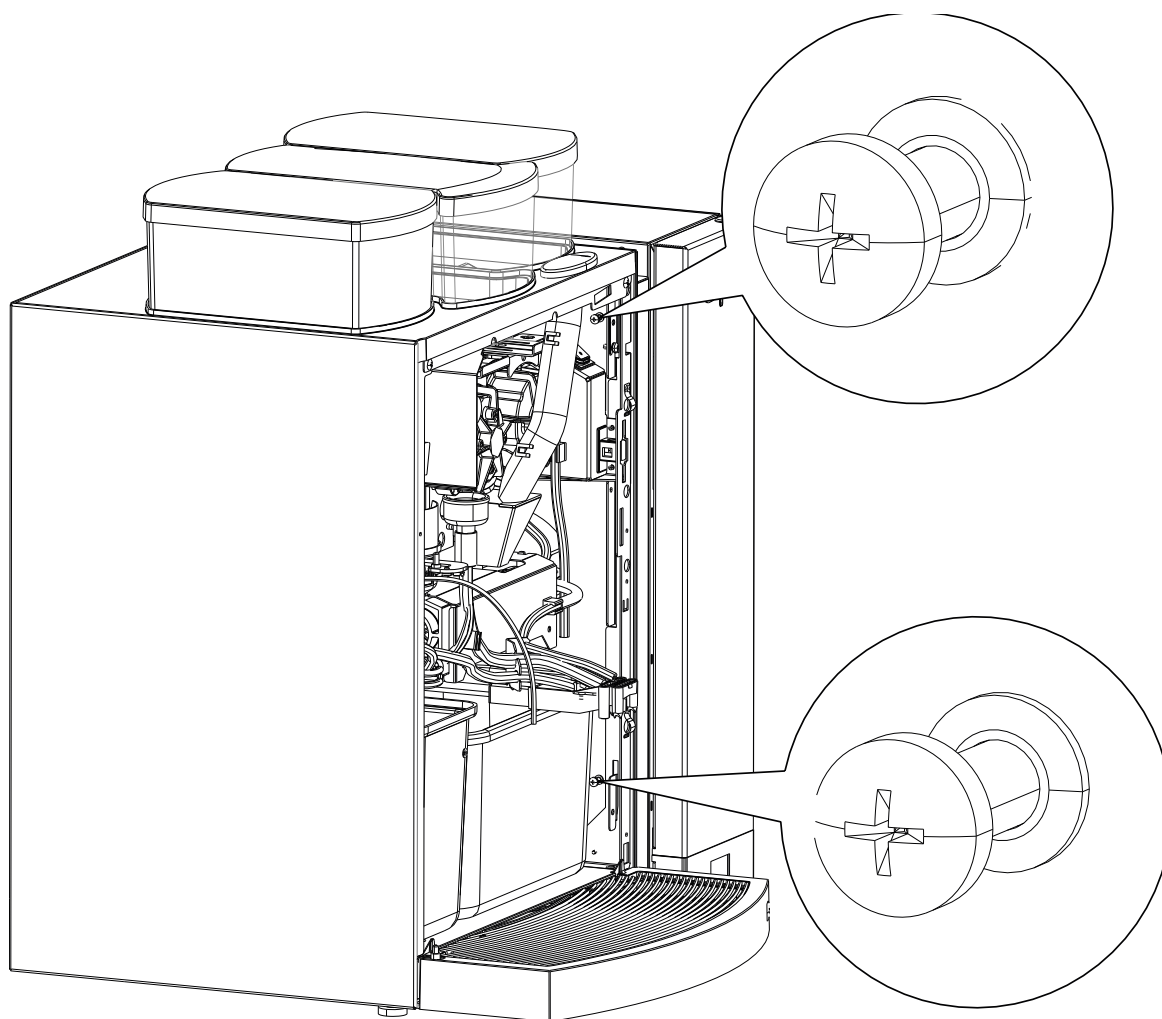

Finally, use the screws and the contact washers that were included in the delivery to fix the module for the payment systems to the hot drinks machine.




NOTE

When connecting two or more modules to one vending machine only the side walls of the module on the right end need to be exchanged.

4.2 Adjust motorized coin return

Adjustment of motorized coin return depends on the used coin mechanism. Therefore you can move the sheet with the return motor up and down. After adjusting the motorized coin return the return lever on the coin mechanism must be securely actuated when pressing the return button.

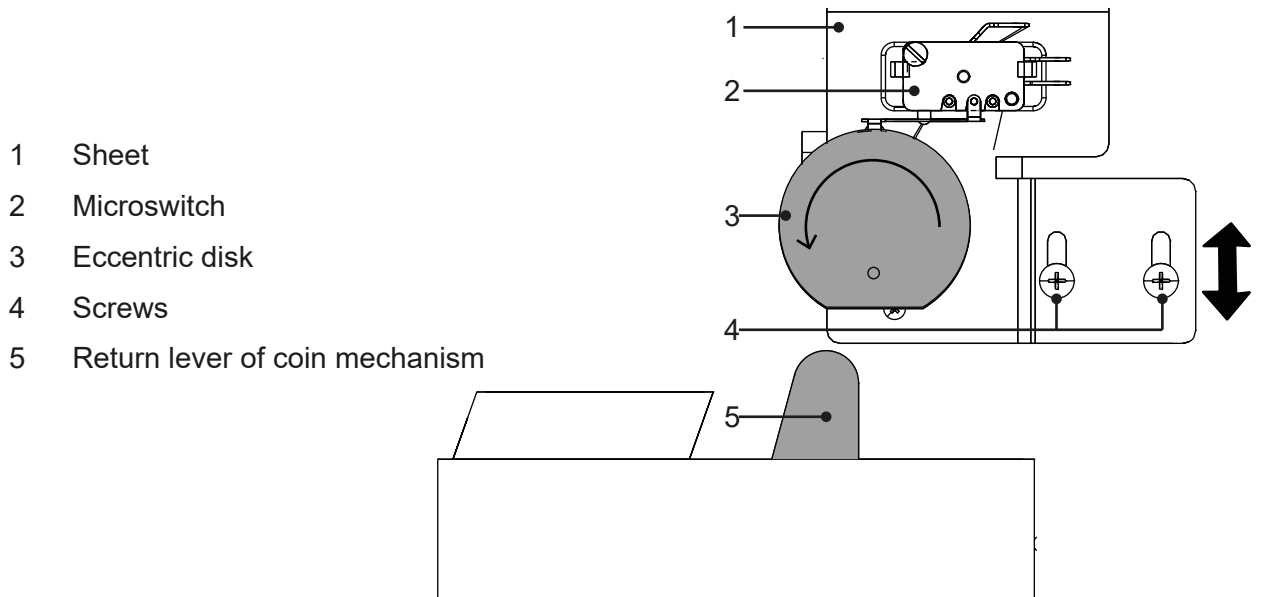



EU/EC Declaration of Conformity for Machines

Sielaff GmbH & Co. KG
Automatenbau
Münchener Str. 20
D-91567 Herrieden

We, the manufacturer, hereby confirm that the vending machine type specified below complies to the EC directive for machinery and the EU directive to electromagnetic compatibility in its design and manufacture relating to health and safety requirements as well as in conformity on the restriction of the use of certain hazardous substances in electrical and electronic equipment.

Any modification without our prior written consent to any of the machines specified herein, will automatically invalidate this declaration.

Description: Cabinet, Cup-warmer,
Module for payment systems

Machine Type: VS ...

EU/EC directives applicable:

EC machinery directive: 2006/42/EC
The following standards also apply:
EN 60335-1:2012

EU directive to electromagnetic compatibility: 2014/30/EU
The following standards also apply:
EN 55014-1:2006 + A1:2009 + A2:2011
EN 55014-2:2015
EN 62233:2008

EU directive RoHS: 2011/65/EU

The objectives of the low voltage directive 2014/35/EU will be fulfilled in accordance with Appendix I, no. 1.5.1 of machine directive 2006/42/EC.

Authorised representative responsible for the documentation:

Mr. Dipl.-Ing. Manfred Murr, Head of Development, Sielaff GmbH & Co. KG, Münchener Str. 20, D-91567 Herrieden.

Aufkleber für Seriennummer

Aufkleber für Typenschild

Herrieden, 21.01.2019
Place, Date

Mr. Robert Zahn
Managing Director

Mr. Dipl.-Ing. Manfred Murr
Head of Development

SIELAFF GMBH & CO. KG
AUTOMATENBAU
Postfach 20
91565 Herrieden
Münchener Straße 20
91567 Herrieden
☎ 0 98 25 / 18-0
Fax 0 98 25 / 1 81 55

Company stamp